

## Product Information

10/29/2009

By: KRD

### **SAM 19- Roller Cam Grip for Woven, Non-woven, and Film Materials**

SAM 19- series roller cam grip is ideally suited for woven and non woven materials and works exceptionally well on film material and other flat samples that are up to 0.225 inches thick. A serrated cam roller is spring loaded and tightens to the sample as the load is applied.

The upper and lower grips are supplied with a 10-32 male and a 10-32 female threaded attachment for direct connection to most force gages and test stands. Swivel attachment options are available for difficult to align samples. Grips are available in lengths from 3 inches to 8 inches and are rated for loads to 150 lbF. Standard grip part numbers are:


SAM-19-3 roller cam grip for samples up to 3 inches wide and up to 0.225 inches thick

SAM-19-4 roller cam grip for samples up to 4 inches wide and up to 0.225 inches thick

SAM-19-5 roller cam grip for samples up to 5 inches wide and up to 0.225 inches thick

SAM-19-8 roller cam grip for samples up to 8 inches wide and up to 0.225 inches thick

Other widths and thicknesses are available on special order. Contact us for more information.

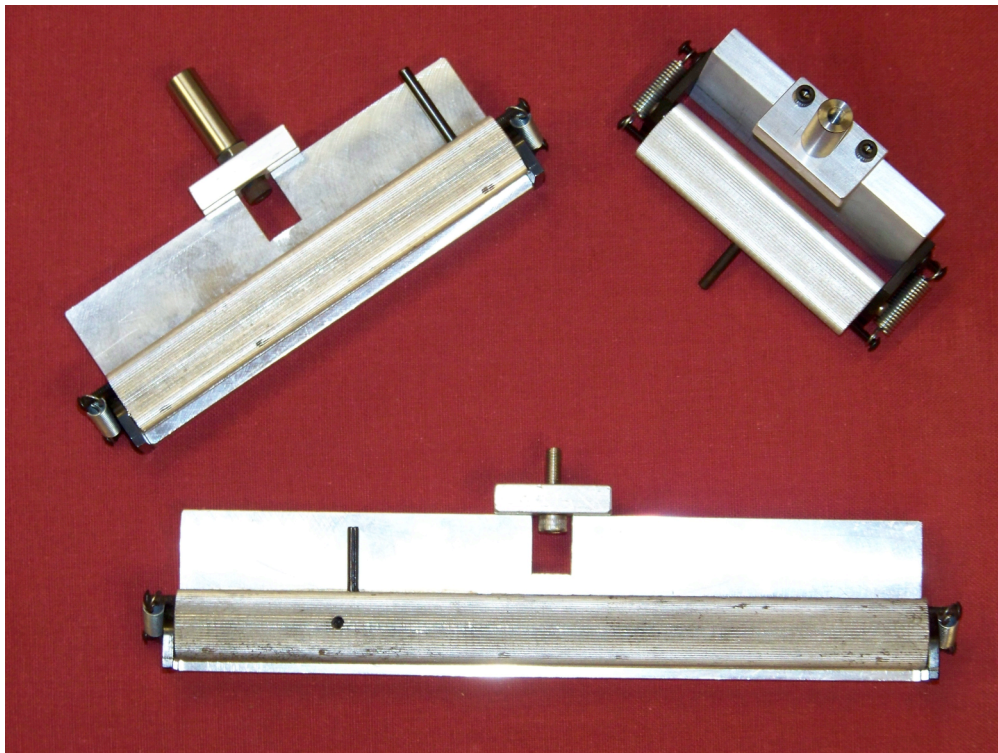

**Shown are SAM 19-3, SAM 19-5, and SAM 19-8**